



SPRINKLER ALARM

Water Motor Gong

TECHNICAL DATA

MODEL	GA
MOUNTING TYPE	Type - A & Type - B
MAXIMUM WORKING PRESSURE	12.3 Kg./Sq.cm. (175 PSI)
CONNECTION	Inlet : 3/4" BSPT (3/4" NPT) Drain : 1" BSPT (1" NPT)
FACTORY TEST	At low flow -0.35 Kg./sq.cm. (5 PSI) & At high flow - 7 kg./sq.cm. (100 PSI)
GONG DIAMETER	205mm (8")
GONG DEPTH	50mm (2")
FINISH	Epoxy red powder coated
WEIGHT	3.0 kg
ORDERING INFORMATION	Model & Mounting Type

SPRINKLER ALARM MODEL - GA

FG Sprinkler Alarm is a hydraulically driven mechanical bell. It does sound a continuous alarm when the sprinkler system operates. The impeller and drive shaft are energy efficient, made from light weight nonmetallic material and does not require any external lubrication. The gong, protection cover and motor housing are made of corrosion resistant aluminium alloy.

OPERATION

When the sprinkler system is activated by the fusing of one or more automatic sprinklers at fire condition the water flows through the Alarm / Deluge Valve and enter the sprinkler alarm through the nozzle, creating a high velocity jet which strikes the impeller causing the drive shaft and the striker arm assembly to rotate. The alarm arm assembly rotate and strikes to impact against the aluminium gong, producing a continuous alarm. The waste water then drains out through a 25NB drain outlet. It takes minimum 0.35 kg./Sq.Cm. (5 PSI) pressure at the nozzle to cause an alarm.



DESIGN REQUIREMENT

Strainer is required in the Sprinkler Alarm line to protect the 3.2 mm nozzle in the water motor housing from clogging.

The alarm line pipe must be 20NB (3/4") size with 22.8 mtrs. (75 feet) maximum total length of pipe with minimum number of fittings. If the length of the pipe exceeds 22.8 mtrs. (75 feet), then higher size pipe must be used to reduce hydraulic friction loss. The Sprinkler Alarm should not be located more than 1.8 mtrs. (Six feet) above Alarm Valve.

MAINTENANCE Qualified and trained person must commission the system. After few initial successful tests an authorised person must be trained to perform inspection and testing of the system.

Even though corrosion resistant material is used in the construction of the Sprinkler Alarm, it is suggested that the Sprinkler Alarm be examined and tested at regular intervals to ensure that the nozzle is free from obstruction and the impeller is free to rotate. The inspection should include the following:

1. Clean 20 NB (3/4") Strainer provided in the alarm line.
2. Open the 3/8" plug provided on the inlet of the Sprinkler Alarm and clean out any accumulated particles.
3. Detach the Gong, clean the internal surface and refit in proper sequence.
4. Activate the Sprinkler Alarm to verify clear and steady sound.

FIREGUARD GLOBAL LTD.


Tel: 00-44-8450751042 • Fax: 00-44-8459751043

Email: Info@Fireguard-Uk.com • www.fireguard-Uk.com

Unit 11 • Chancel Industrial Estate • Newhall Street
Willenhall • WV13 1NX • United Kingdom



FS546607

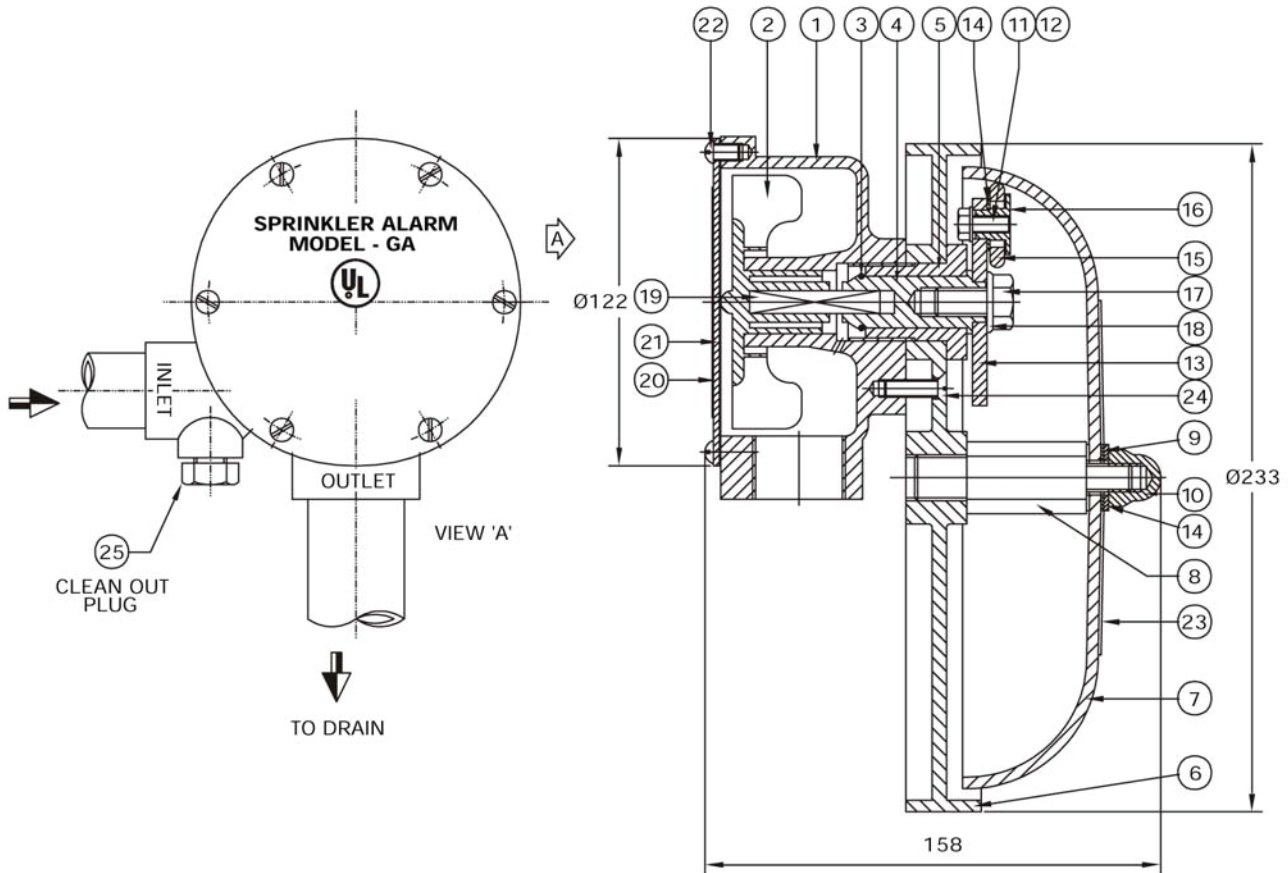


PART LIST

ITEM NO.	CODE	DESCRIPTION	QTY.	MATERIAL
1	5001	HOUSING	1	ALUMINIUM ALLOY
2	5002	GONG IMPELLER	1	DELRIN
3	5003	RETAINING RING	1	SS 316
4	5004	DRIVE SHAFT ADAPTOR	1	DELRIN
5	5005	BUSH	1	ALUMINIUM ALLOY
6	5006	PROTECTION COVER	1	ALUMINIUM ALLOY
7	5007	GONG	1	ALUMINIUM ALLOY
8	5008	GONG POST	1	ALUMINIUM ALLOY
9	5018	NYLON WASHER	2	NYLON
10	5009	DOME NUT	1	ALUMINIUM ALLOY
11	9106	HEX. HED BOLT	1	PLATED STEEL
12	5019	WASHER	1	S.S.
13	5010	STRIKER ARM	1	ALUMINIUM ALLOY

ITEM NO.	CODE	DESCRIPTION	QTY.	MATERIAL
14	5011	STRIKER WASHER	1	ALUMINIUM ALLOY
15	5012	STRIKER	1	FIBRE
16	5013	STRIKER BUSH	1	ALUMINIUM ALLOY
17	5014	STRIKER ARM BOLT	1	ALUMINIUM ALLOY
18	5015	STRIKER ARM WASHER	1	ALUMINIUM ALLOY
19	5024	DRIVE SHAFT	1	ALUMINIUM ALLOY
20	5016	HOUSING COVER	1	ALUMINIUM ALLOY
21	5017	GASKET	1	NEOPRENE
22	9029	CH. HED. BOLT	6	PLATED STEEL
23	5020	GONG STICKER	1	PVC
24	9025	SCREW	1	PLATED STEEL
25	5022	PLUG	1	ALUMINIUM ALLOY

- All dimension in mm

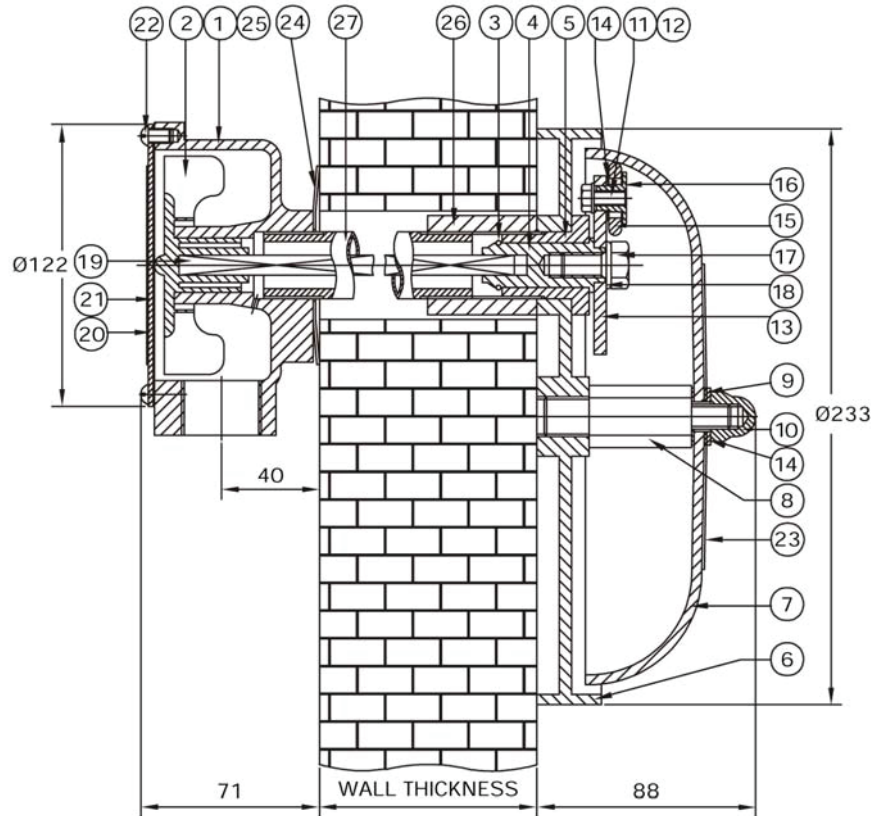

PART LIST

ITEM NO.	CODE	DESCRIPTION	QTY.	MATERIAL
1	5001	HOUSING	1	ALUMINIUM ALLOY
2	5002	GONG IMPELLER	1	DELTRIN
3	5003	RETAINING RING	1	SS 316
4	5004	DRIVE SHAFT ADAPTOR	1	DELTRIN
5	5005	BUSH	1	ALUMINIUM ALLOY
6	5006	PROTECTION COVER	1	ALUMINIUM ALLOY
7	5007	GONG	1	ALUMINIUM ALLOY
8	5008	GONG POST	1	ALUMINIUM ALLOY
9	5018	NYLON WASHER	2	NYLON
10	5009	DOME NUT	1	ALUMINIUM ALLOY
11	9106	HEX. HED BOLT	1	PLATED STEEL
12	5019	WASHER	1	S.S.
13	5010	STRIKER ARM	1	ALUMINIUM ALLOY
14	5011	STRIKER WASHER	1	ALUMINIUM ALLOY

ITEM NO.	CODE	DESCRIPTION	QTY.	MATERIAL
15	5012	STRIKER	1	FIBER
16	5013	STRIKER BUSH	1	ALUMINIUM ALLOY
17	5014	STRIKER ARM BOLT	1	ALUMINIUM ALLOY
18	5015	STRIKER ARM WASHER	1	ALUMINIUM ALLOY
19	5027	DRIVE SHAFT	1	ALUMINIUM ALLOY
20	5016	HOUSING COVER	1	ALUMINIUM ALLOY
21	5017	GASKET	1	NEOPRENE
22	9029	CH. HED. BOLT	6	PLATED STEEL
23	5020	GONG STICKER	1	PVC
24	5021	WALL SUPPORT WASHER	1	MS
25	5022	PLUG	1	ALUMINIUM ALLOY
26	5023	COUPLING	1	STEEL
27	5025	SUPPORT PIPE	1	GI PIPE (BY INSTALLER)

- All dimension in mm



SPRINKLER ALARM WATER MOTOR GONG



www.fireguard-Uk.com

INSTALLATION OF SPRINKLER ALARM MODEL GA MOUNTING TYPE - A

The Sprinkler Alarm with mounting Type-A is supplied pre-assembled. Connect the Alarm port of the Alarm valve or Deluge valve to the inlet of the sprinkler alarm assembly with 20NB (3/4") pipe with proper support. A 20NB (3/4") strainer is to be provided as close as possible to the Sprinkler Alarm assembly. Connect the 25NB (1") drain pipe to the housing, taking due care that the drain discharge is running to a safe location and keep the drain free from obstruction. A blocked drain discharge may create back pressure and prevent the Sprinkler Alarm from operating properly

The 20NB (3/4") inlet and 25NB (1") drain pipe should be properly supported with the help of the bracket so that in turn proper support is available for the Sprinkler Alarm. The inlet and the drain pipe is to be preferably connected with an union for easy removal and re-fixing of the Sprinkler Alarm during maintenance.

The Sprinkler Alarm must be installed in accordance with the requirement of NFPA, TAC or to the requirement of the local authority having jurisdiction.

INSTALLATION OF SPRINKLER ALARM MODEL GA MOUNTING TYPE - B

1. Lacate and cut a hole through the building wall to accommodate a 20NB (3/4") pipe with coupling (galvanised pipe to be supplied by the installer). The required length of support pipe is equal to the thickness of the wall minus 30 millimetres. The pipe is to be threaded with the standard 20NB (3/4) pipe threading on the both ends to a length of 20 millimetres. Cut the drive shaft length, equal to the wall thickness plus 43 millimetres.

2. Insert one end of the drive shaft (19) into the square hole provided in the impeller (2) of the Sprinkler Alarm gong assembly.

One end of 20NB (3/4") support pipe is to be screwed to the coupling (26) provided with the assembly and the other end of the pipe is to be screwed to the housing (1) of the Sprinkler Alarm motor assembly as shown in the figure. Position this assembly against the building wall through a washer (24) with the support pipe extending through the wall.

3. Connect the alarm port of the Alarm Valve or Deluge Valve to the inlet of the Sprinkler Alarm assembly with 20NB (3/4) pipe, with proper support. A 20NB (3/4") strainer is to be provided as close as possible to the Sprinkler Alarm assembly.

4. Move to the other side of the wall, place protection cover (6) on to the pipe coupling (screwed to the pipe) and hold against the wall. Insert the bush (5, assembly with drive shaft adaptor) into the hole provided in the protection cover and thereby hand tighten the coupling extending through the wall. Make sure that the drive shaft is properly fitted in the square hole of impeller and drive shaft adaptor. This can be ensured by rotating the drive shaft adaptor. The drive shaft adaptor should rotate without any binding while tightening the bush. If any binding is noticed then unscrew the bush and refit. After ensuring that the drive shaft is properly placed in the square holes at both ends, wrench tight the bush

5. Place the gong over the gong post with washers as shown in the cross-sectional drawing and hand tighten the dome nut, rotate the gong until the lettering is properly originated. Wrench tighten the dome nut.

6. Connect the 25NB (1) open drain pipe to the motor housing, taking due care that the drain discharge is running to a safe location and keep it free from obstruction

